



**Unit Model #: 795003 (Yanmar 7 HP) & 795009 (B&S 14 HP)**

**Description:** 50 cu. ft. Estate Series


**Drive Type:** Yanmar 7HP Diesel Engine / Briggs & Stratton 14HP Vanguard

**Mower Type:** Universal


**Vac Type:** Engine Driven Trailer Vac

**Manual:** Q0572

**Revision #:** 6 - Updated Standard Options/ Created Options Page (Jan. 2023 - KR)

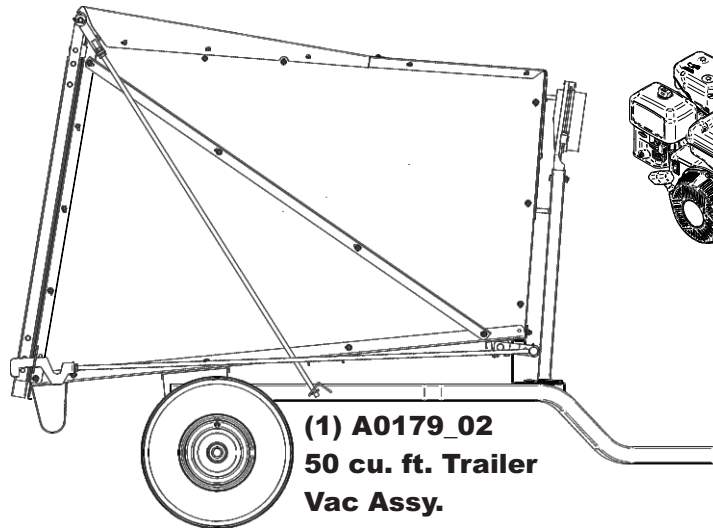


(1) A0179\_02  
50 cu. ft. Trailer  
Vac Assy.

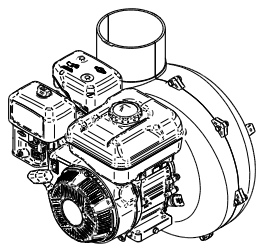


- A620 - Yanmar 7HP Diesel
- A640 - B&S 14HP Vanguard

(1) A0243  
Engine Mount

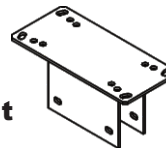


(1) A08185  
Hardware Bag

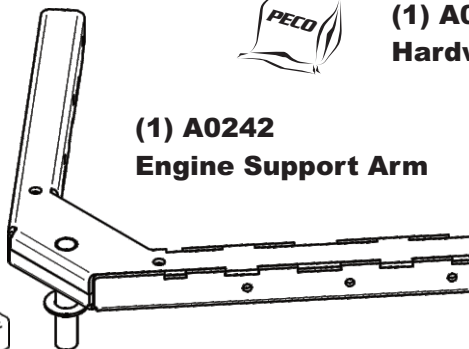


(1) A0242  
Engine Support Arm


(2) B2226  
Tongue Mount  
Bracket

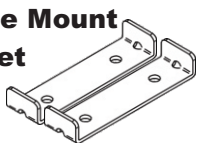

(2) B2230  
Eng Swing Arm  
Lockout Brkt

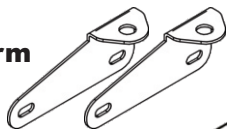


(1) B2225  
Tongue Tube

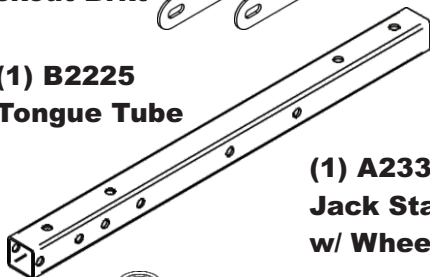


(1) F0070-66  
Upper Hose  
7" x 66"



(1) A2333  
Jack Stand  
w/ Wheel

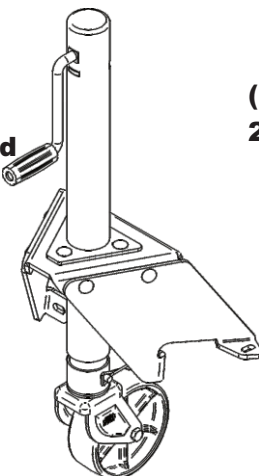


(1) J0033  
2" Trailer Coupler

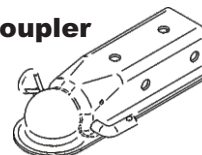




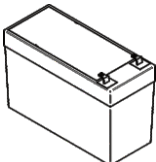
(2) J0070  
7" Hose Clamps

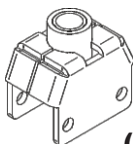

(1) A2403  
Mount Arm  
Swivel Assy



**A2326 Universal Battery Kit**

-  (1) B0945\_01  
Battery Box
-  (1) HB0838  
Battery Kit  
HW Bag
-  (1) C0118  
Battery Clamp
-  (1) J1201  
12V Sprayer Battery

**A2404 Tongue Hitch Assembly**

-  (1) B2223  
Tongue Plate  
/ Top
-  (1) B2224  
Tongue Plate  
/ Bottom
-  (1) HB0867  
Tongue Hitch  
Kit HW Bag

Select the Boot Kit  
That is needed

A2284 Universal Small Boot Kit / Large Hsg

A2283 Universal Large Boot Kit / Large Hsg


Other Boot Kit ( \_\_\_\_\_ )




**Unit Model #: 795003 (Yanmar 7 HP) & 795009 (B&S 14 HP)**

**Additional Options:**


**A2276 Trailer Tow Kit**

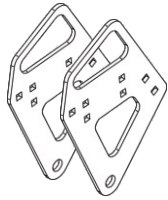

(2) B2015 Side Plates




(1) B2018 Handle Base

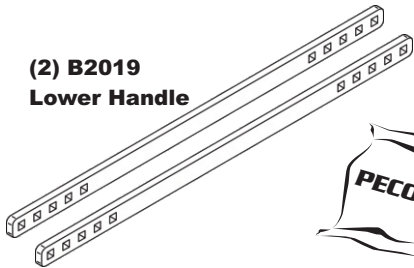

(2) B2019 Lower Handle




(1) HB0805 HW Bag / Trailer Tow Kit

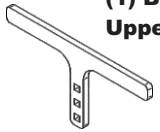


(1) B2020 Upper Handle

(1) B2017 Upper Tongue Mount

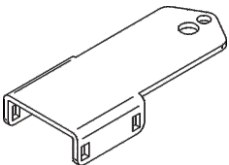

(1) B2016 Lower Tongue Mount

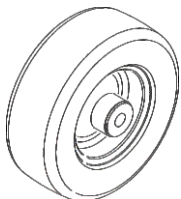


(1) H3408 Wheel & Tire

**A1861 Wand Kit / Large**

(2) J0060 6" Hose Clamps




(1) B0762 Lower Handle

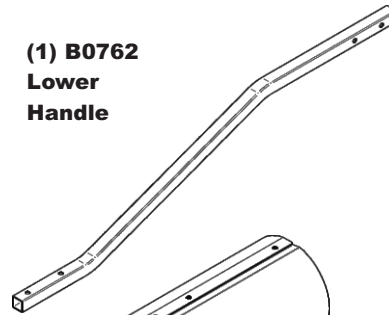


(1) HB0485 Wand Kit HW Bag



(1) C2120 6" Nose Cone

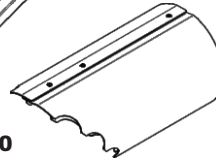

(1) B0755 Upper Handle

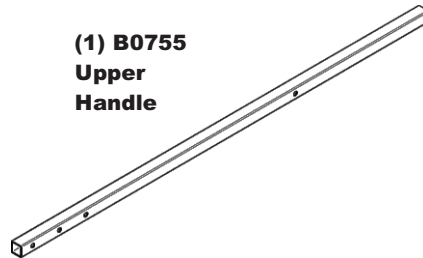

(1) E6005 6" Blower Cone




(1) F0069 Wand Hose 6" x 18'



**A2409 Hose Hanger Kit**



(1) HB0872 Hardware Bag

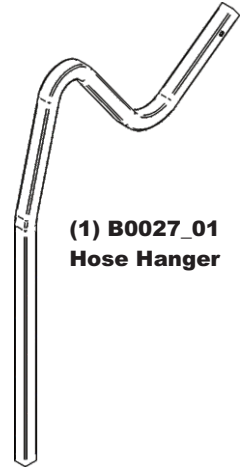

(1) B0027\_01 Hose Hanger



**Model #A2284**

**Desc:** Universal Small Boot Kit / Large Housing


**Revision #:** 1 - Updated Hose Length (Dec 2020)

**Instruction Sheet:** Q2054

**A2284 Universal Small Boot Kit**



(1)  
F0070-75  
7" x 75"  
Lower Hose

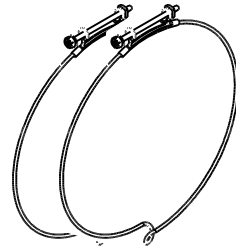


(2)  
J0070  
7" Hose  
Clamps



(1)  
E6007  
7" Blower  
Cone

(1)  
HB0808  
Boot Kit  
HW Bag

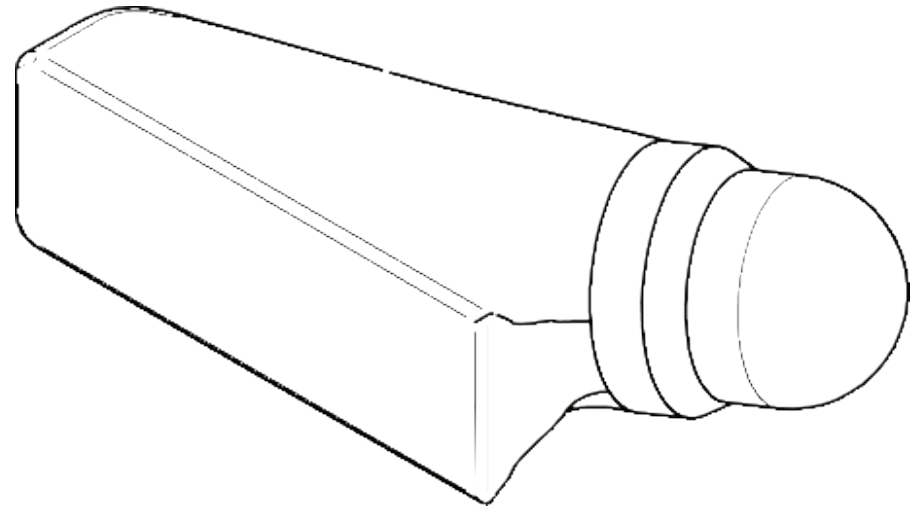

(1)  
V1018  
Universal  
Boot / Small



**Model #A2283**

**Desc:** Universal Large Boot Kit / Large Housing


**Revision #:** 1 - Updated Hose Length (Dec 2020)

**Instruction Sheet:** Q2053

**A2283 Universal Large Boot Kit**



(1)  
F0080-75  
8" x 75"  
Lower Hose

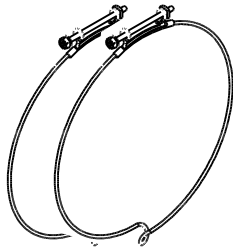


(2)  
J0080  
8" Hose  
Clamps



(1)  
E6008  
8" Blower  
Cone

(1)  
HB0807  
Boot Kit  
HW Bag

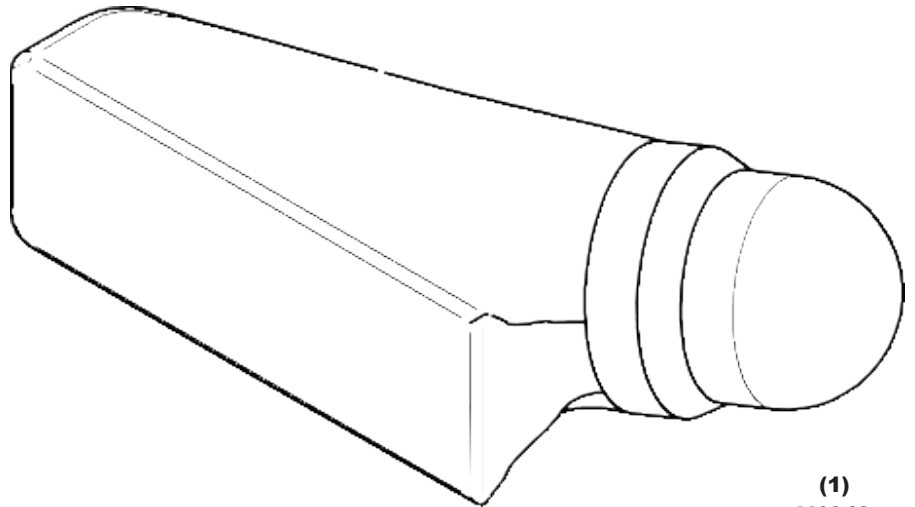

(1)  
V1049  
Universal  
Boot / Large