



Unit Model #: 37120907

Mower: Scag

Owner's Manual: Q0497

Mower Type: Liberty-Z

Engine Type: Kohler 7000 Series 22 HP

Deck Size: 48"

Vac Type: 9 Cu. Ft. Pro 2+ Bagger


Deck Type:

Drive Type: PTO-R Drive (3-Blade)


Revision:

Fits Year(s): 2015-Newer

A2192 Vac Kit

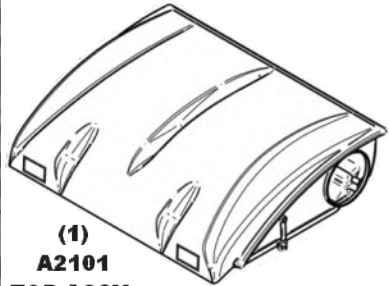

(1)
**A2101
TOP ASSY.**

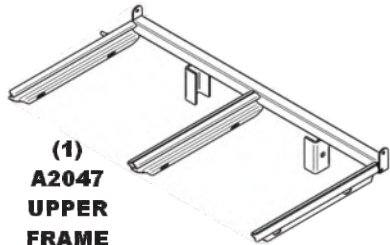


(1)
**A2047
UPPER
FRAME
ASSY.**



(1)
**HB0683
HARDWARE
BAG**



(1)
**V0025
6" & 7"
PLASTIC
INLET**

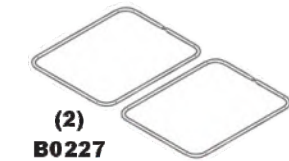


(2)
**B0227
BAG RING**

A1153 48" BAFFLE KIT


(1)
**HB0476
HARDWARE
BAG**




(1)
**B0709
48" LEFT HAND
BAFFLE**

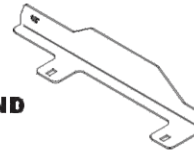


(1)
**A1154
48" RIGHT HAND
BAFFLE
ASSEMBLY**

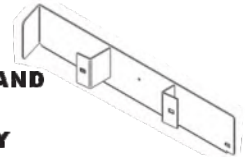


A2029 Mount Kit

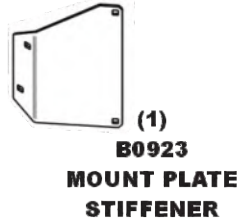


(1)
**B0923
MOUNT PLATE
STIFFENER**

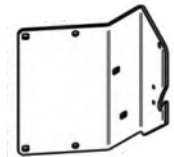

(1) **B0916
RIGHT PTO
MOUNT PLATE**

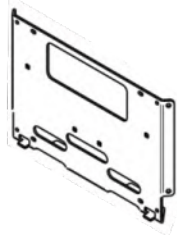

(1) **B0914
REAR
MOUNT
PLATE**

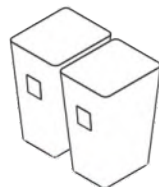

(2) **G0002
3.3 CU. FT.
COLLECTION
BAGS**

(1)
**F0060-
18
6" x 18"
UPPER
HOSE**




(1) **B0733
PTO
STOP
PLATE**



(4) **J0060
6" Hose
Clamp**

(1) **B0913
MUFFLER
GUARD**

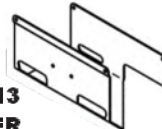

(1) **B0917
LT. PTO
MNT. PL.**




(1) **F0060-21
6" x 21"
LOWER HOSE**



(1) **V0016
BLOWER
CONE 6"**



(4) **B0915
SPACER
PLATE**

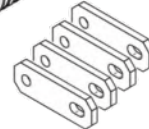


(2) **B0640
LWR.
FRAME
TUBE**



(1) **A1138_01
PTO-R HANDLE
EXT KIT**



(1)
**A2267
3-Blade
PTO Assy.**

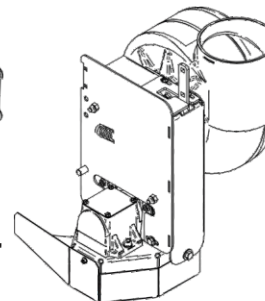


(1) **M0256
A57KBelt**




(1) **HB0651
ENGINE PULLEY
HARDWARE BAG**

(1) **HB0652
HARDWARE
BAG**

A1790 Boot Kit

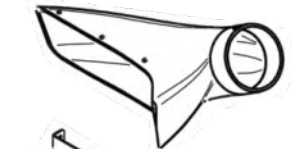


(1)
**V0027
BOOT**



(1)
**B0918
BOOT PLATE**



(1)
**B0919
BOOT PLATE
FASTENER**




(1)
**B4331
BOOT ROD**


(1)
**HB0432
HARDWARE
BAG**

A1791 Weight Kit

(1)
**HB0431
HARDWARE
BAG**

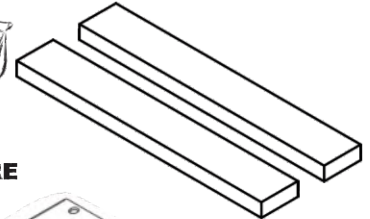

(1)
**B0576
WEIGHT
BRACKET**

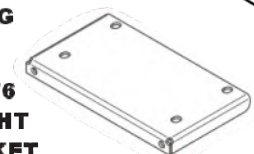

(2)
**B2220
27" WEIGHT
BAR**

